

## Introducing Manuverate™

The first of its kind modular designed vehicle-based Goods-To-Person delivery system that is changing the way products are delivered direct to the store and home.

Visit our [website](http://www.manuverate.us) to learn more about how the Manuverate™ Ergonomic Delivery System can work with your existing side bay beverage delivery trucks and tractor trailers.


-  Michael Blouch, President
-  [mbloch@manuverate.us](mailto:mbloch@manuverate.us)
-  352-789-2807
-  [Manuverate.us](http://Manuverate.us)
-  150 Farm Lane #200  
York, PA 17402



## GEN III-8 KEG MODULE QUICK START GUIDE




US PAT 9073470  
EP PAT 2734412  
JP PAT 6030129

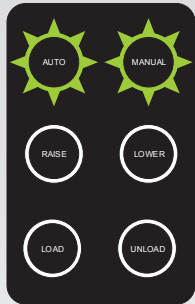

**1**

**> Select Auto or Manual Operation**


NOTE: If the shelves are not in the fully lowered position, use manual lower to adjust.

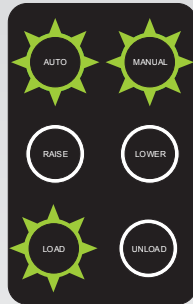

**2**

**> Load Upper Shelf with 4 Kegs**


NOTE: If in Auto Load mode, simply place keg on front lip to begin conveying.

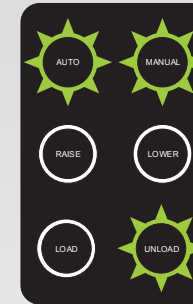

**6**

**> Unload Lower Shelf**


NOTE: In Auto Unload mode, kegs will automatically convey outward until they reach the front lip.

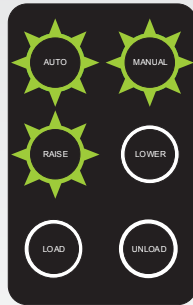

**3**

**> Raise Upper Shelf**


NOTE: Objects near front lip can block light sensors and prevent raise / lower functionality of unit.

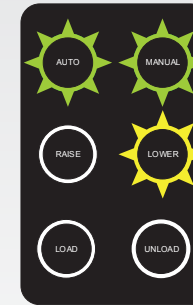

**7**

**> Lower Upper Shelf**


CAUTION: Lowering top shelf with kegs on the bottom shelf can cause serious injury.

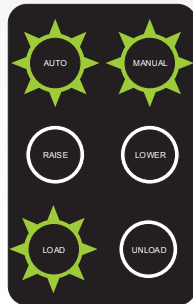

**4**

**> Load Lower Shelf with 4 Kegs**

NOTE: After 5 minutes of inactivity, the module will go to sleep. Secure load in the truck.

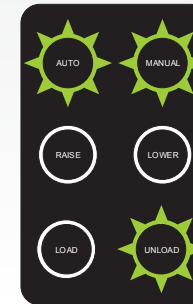

**8**

**> Unload Upper Shelf**


NOTE: In Auto Unload mode, kegs will automatically convey outward until they reach the front lip.



**5**

**> Travel to the Customer Destination**

NOTE: The Module may be in the sleep mode, so select Auto or Manual operation to wake it up.

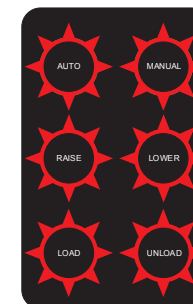

**9**

**> Emergency Stop Button**

CAUTION: Emergency Stop pushbutton is used when the operator detects a system fault.

**Emergency Stop Button**



**Operator Control Panel**

All operators must be fully trained and authorized to use the Manuverate Module in accordance with the Owner's User Manual.

